

HOW TO ASSEMBLE THE PLIER SEAL FOR USE

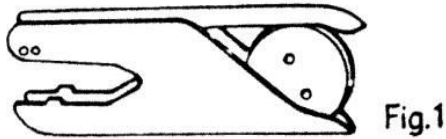


Fig.1

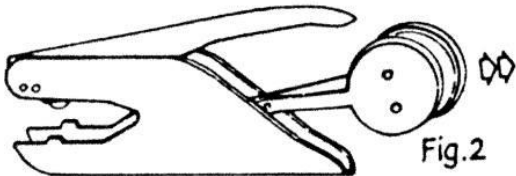


Fig.2

TO ASSEMBLE

(A) Raise the lever, pinch together the two discs and withdraw the sprung punch-piece from the handle. Notice the two holes on the outside face of one of the discs. (Fig.2)

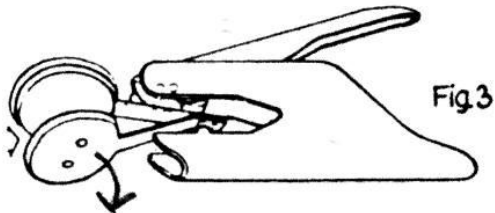


Fig.3

(B) With the discs pinched together insert the free end of the punch-piece into the jaws of the seal so that the disc with the holes slides onto the teeth of the seal's lower jaw. (Figs.3&4)

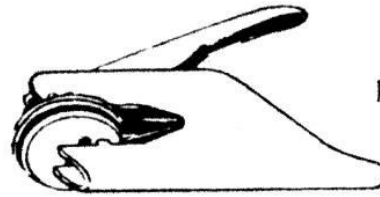


Fig.4

(C) Make sure the teeth fully engage into the holes of the disc. (Fig.5)

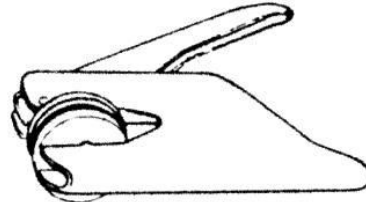


Fig.5

The seal is now ready for use. (Fig.6)

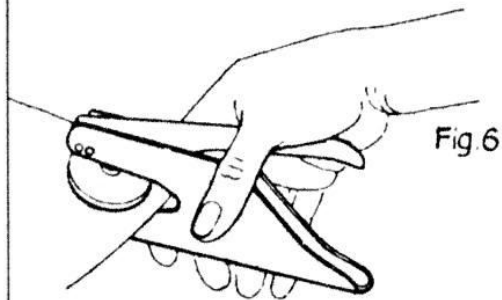


Fig.6

TO DISMANTLE

Raise the lever, pinch together the two discs tightly, disengage the punch-piece from the teeth and pull it out of the jaws. Replace it in the handle as in Fig.1. Pack away.